



Einteilung (Personenkraftwagen/Nutzfahrzeuge) in die verschiedenen Schadstoffklassen
nach den Emissionsschlüsselnummern

PERSONENKRAFTWAGEN (Pkw)					
Sonstige, Euro 1, Euro 2, Euro 3		Euro 4	Euro 5	Euro 6	
				NEFZ- Prüfverfahren	WLTP- Prüfverfahren
0400	0430	0447	35A0	36N0	36AA
0401	0431	0448	35B0	36O0	36AB
0402	0432	0449	35C0	36P0	36AC
0403	0433	0450	35D0	36Q0	36AD
0404	0434	0451	35E0	36R0	36AE
0405	0435	0452	35F0	36S0	36AF
0406	0436	0453	35G0	36T0	36AG
0407	0437	0454	35H0	36U0	36AH
0408	0438	0455	35I0	36V0	36AI
0409	0439	0456	35J0	36W0	36AJ
0410	0440	0457	35K0	36X0	36AK
0411	0441	0458	35L0	36Y0	36AL
0412	0442	0459	35M0		36AM
0413	0443	0460		36ZA	36AN
0414	0444	0461		36ZB	36AO
0415	0445	0462		36ZC	36AP
0416	0446	0463		36ZD	36AQ
0417	0471	0464		36ZE	36AR
0418	0472	0465		36ZF	
0419	0473	0466		36ZG	36BA
0420	0474	0467		36ZH	36BB
0421	0475	0468		36ZI	36BC
0422	0477	0469		36ZJ	36BG
0423	0488	0470		36ZK	36BH
0424	0498			36ZL	36BI
0425	9991				36CG
0426	9992				36CH
0427					36CI
0428					36DG
0429					
				30ZX	30AX
				30ZY	30AY
				30ZZ	30AZ

NUTZFAHRZEUGE				
sonstige, Euro I, Euro II, Euro III		Euro IV	Euro V, EEV	Euro VI
0600	0642	0635	0683	66A0
0601	0643	0680	0684	66B0
0602	0644	0681	0690	66C0
0610	0645		0691	66D0
0611	0650			66E0
0612	0651			
0620	0652			
0621	0653			
0622	0654			
0630	0655			
0631	0660			
0632	0661			
0633	0670			
0634	0671			
0640	0688			
0641	0698			
	**99			